

# Knock Sensor KS4-R



- ▶ Frequency: 3 to 25 kHz
- ▶ Weight: 82 g
- ▶ Height sensor head: 18 mm

This sensor is used for detecting structural born vibrations in spark ignition engines due to uncontrolled combustion. This sensor is suitable for operation in extreme conditions.

Due to the inertia of the seismic mass, the sensor moves in correlation to the engine block vibration; this motion results in a compressive force which is converted into a voltage signal via a piezoceramic sensor element. As a result, upper and lower voltage thresholds can be defined directly correlating to an acceleration magnitude.

The main benefits of this sensor are its robust mechanical design, compact housing and precise determination of structure-related noise. Connection to this sensor can be tailored to customer requirements through specified wire lengths and various connector options.

## Application

Application	3 to 25 kHz
Operating temperature range	-40 to 130°C
Storage temperature range	-30 to 60°C
Max. vibration	≤ 800 m/s <sup>2</sup>

## Technical Specifications

### Mechanical Data

Male thread (for cast)	M8x25
Male thread (for Al)	M8x30
Installation torque	20 ± 5 Nm
Weight w/o wire	82 g
Protection	IP 54

### Electrical Data

Range of frequency	3 to 25 kHz
Sensitivity at 5 kHz	28.8 mV/g
Max. sensitivity changing (lifetime)	-17 %
Linearity between 5 to 15 kHz (from 5 kHz value)	-10 to 10 %
Linearity between 15 to 20 kHz (linear increasing with freq)	20 to 50 %
Main resonance frequency	> 30 kHz
Impedance	> 1 MOhm
Temperature dependence of sensitivity	0.04 mV/g°C
Capacity field	1,150 ± 200 pF

### Connectors and Wires

Connector	A261.230.252
Mating connector 2-pole	2-Pin RB-Kp.1 (D261.205.337-01)
Pin 1	Sig +
Pin 2	Sig -
Sleeve	PUR
Wire size	0.5 mm <sup>2</sup>
Wire length L	530 mm
Various motorsport and automotive connectors on request.	

### Installation Notes

The KS4-R can be connected to all Bosch Motorsport ECUs featuring knock control

The sensor must rest directly on the brass compression sleeve during operation.

To ensure low-resonance coupling of the sensor to the measurement location, the contact surface must be clean and properly machined to provide a secure flush mounting.

Please route the sensor wire in a way that prevents resonance vibration.

Please find further application hints in the offer drawing at our homepage.

**Safety Note**

The sensor is not intended to be used for safety related applications without appropriate measures for signal validation in the application system.

**Legal Restrictions**


Generally blocked are direct and indirect business involving high risk destinations, including Russia, Belarus, Cuba, Iran, North Korea, Syria, Libya, Afghanistan, and certain non-governmental controlled Ukrainian regions. This list may change as geopolitics evolve.

**Ordering Information**

**Knock Sensor KS4-R**

Order number **0261.231.218**

**Dimensions**

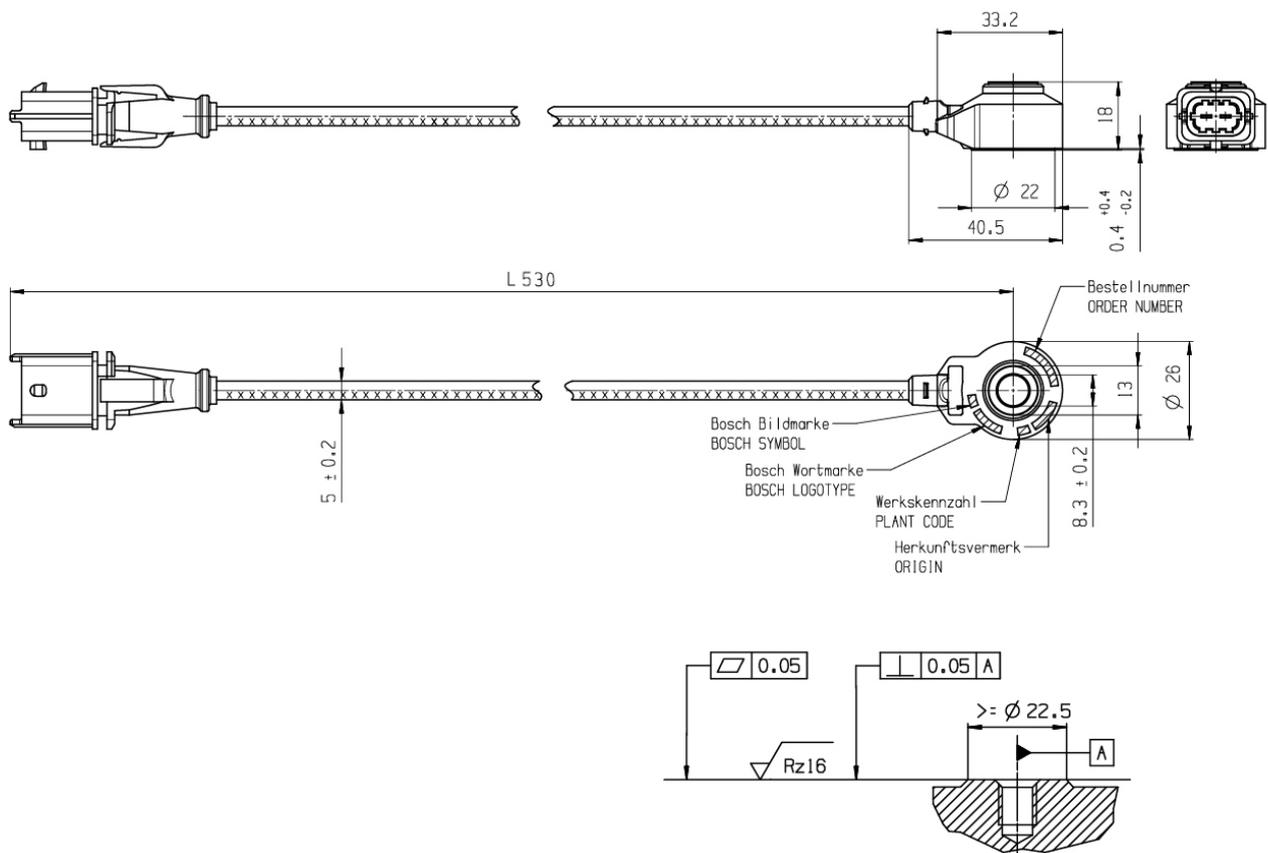

**Represented by:**

**Europe:**  
 Bosch Engineering GmbH  
 Motorsport  
 Robert-Bosch-Allee 1  
 74232 Abstatt  
 Germany  
 motorsport@bosch.com  
 www.bosch-motorsport.de

**North America:**  
 Bosch Engineering North America  
 Motorsport  
 38000 Hills Tech Drive  
 Farmington Hills, MI 48331-3417  
 United States of America  
 motorsport@bosch.com  
 www.bosch-motorsport.com

**Asia-Pacific:**  
 Bosch Engineering Japan K.K.  
 Motorsports Department  
 1-9-32 Nakagawachuo, Tsuzuki-ku  
 Yokohama-shi  
 Kanagawa, 224-8601  
 Japan  
 motorsport@jp.bosch.com  
 www.bosch-motorsport.jp

**Australia, New Zealand and South Africa:**  
 Robert Bosch Pty. Ltd  
 Motorsport  
 1555 Centre Road  
 Clayton, Victoria, 3168  
 Australia  
 motor.sport@au.bosch.com  
 www.bosch-motorsport.com.au